SONICLEAN®

Handheld Steamer

Model SHS-5

instruction manual

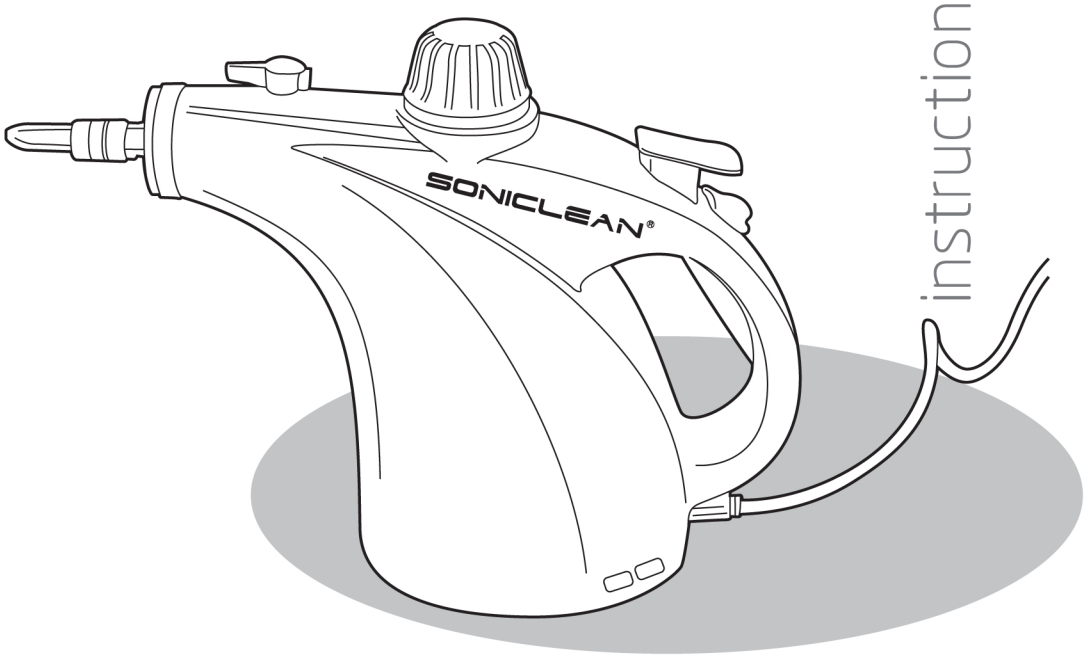

www.mysoniclean.com

Please read carefully before using this cleaner.
Always fully extend the power cord before use.
Retain for future reference.

1. Diagram

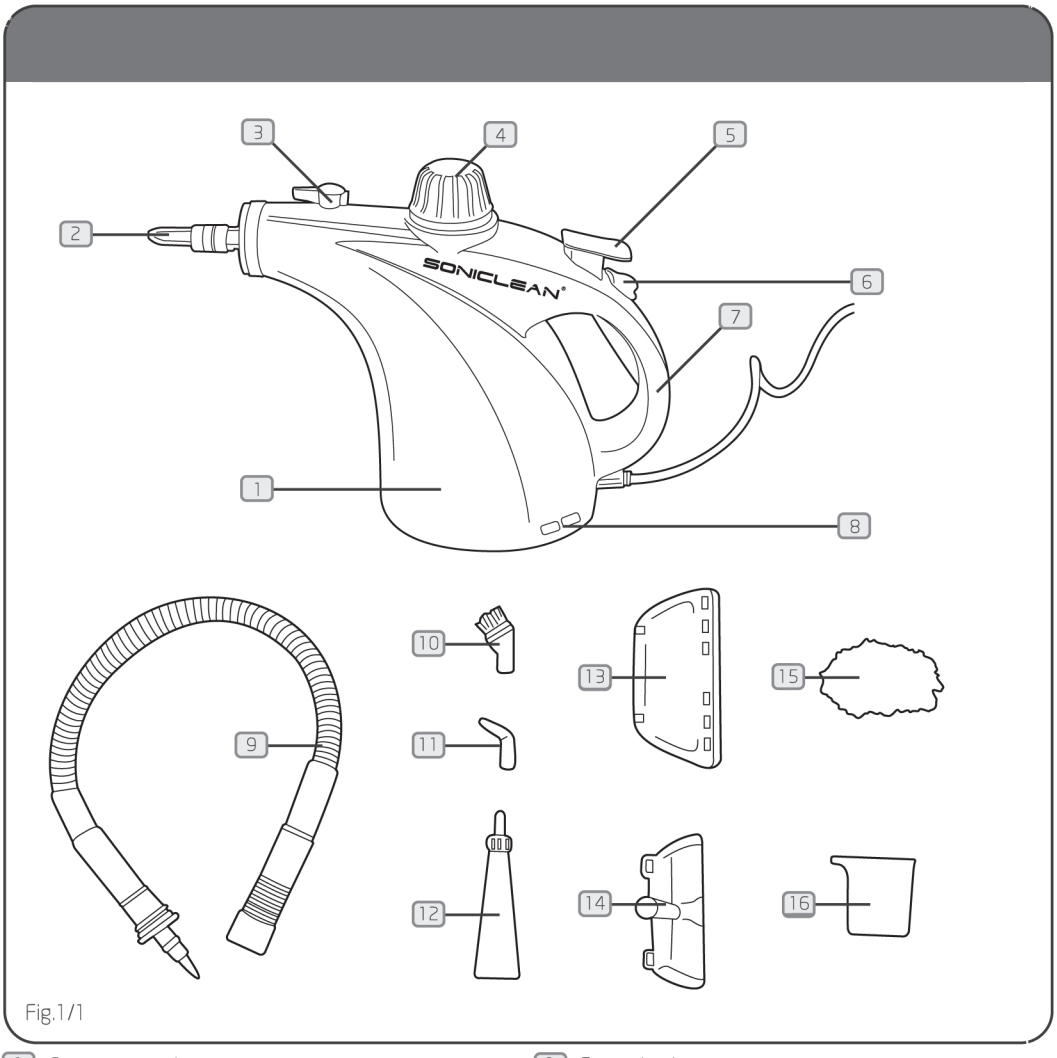

Fig.1/1

1. Steam reservoir
2. Nozzle
3. Steam power adjuster
4. Steam reservoir lid
5. Steam trigger
6. Steam trigger safety latch
7. Handle
8. Steam ready and power on/off indicators
9. Extension hose
10. Stiff bristle brush
11. Detail tool
12. Steam nozzle
13. Window tool
14. Mattress / upholstery tool
15. Cotton cloth
16. Steam reservoir jug

2. Safety Information

FOR HOUSEHOLD USE ONLY.

⚠ WARNING: Beware that the nozzle gets very hot during operation.

DANGER OF SCALDING: Avoid contact with the steam.

1. Do not leave the appliance unattended while it is switched on. Unplug the appliance from the electrical outlet before each cleaning / maintenance and before you fill / empty the water tank.
2. The appliance must be kept out of children's reach and can't be used by children.
3. In order to ensure safety, the appliance should only be assembled, connected and operated as set out in the instructions. Please also pay attention to the specifications on the model plate. Use only the accessories, which are recommended by manufacturer.
4. Examine the appliance before use in order to detect signs of damage. Do not operate if the appliance, its power cord or plug, show any signs of damage. In order to comply with safety regulations and to avoid hazards, qualified personnel must carry out repairs of electrical appliances.
5. The appliance cannot be operated if the power cord or plug is damaged. Do not use the power cord to carry the appliance. Beware that the power cord does not come into contact with hot surfaces.
6. Check the appliance and the power cord before each use for perfect condition.
7. After using, unplug the appliance from the electrical outlet.
8. During the operation keep the openings and the air outlet always free for good air ventilation.
9. Make sure that the appliance is not tilted over 45° during the operation. When the appliance is in operation, the nozzles should not be directed toward humans, animals or plants.
10. Never immerse the appliance into water or other liquid.
11. Only use water in this appliance. Descaling products, perfume, detergent, etc. should not be used with appliance in order to avoid damage.

NOTE: If the Power cord is damaged it must replaced by an Authorized Soniclean Dealer in order to avoid a hazard.

NOTE: Before each cleaning/maintenance and after each use unplug the appliance from the electrical outlet and let it cool down sufficiently.

NOTE: The liquid or steam must not be directed towards equipment containing electrical components, such as the interior of ovens.

The filling aperture must not be opened during use.

⚠ WARNING: The appliance heats up in the operation therefore do not touch the hot surface; use only the grasps or buttons. Always let the appliance cool down before accessories are removed or attached from it.

⚠ ELECTRICAL WIRING: This appliance must be attached to an electrical outlet with grounding, therefore it is equipped with a power cord with ground wire.

⚠ WARNING: Only a qualified person is allowed to check your electrical outlet. Never try to modify or change the power plug of the appliance. Make sure that the supply voltage corresponds to the voltage marked on the rating label of the appliance.

PLEASE KEEP THESE INSTRUCTIONS FOR FURTHER USE.

3. Attaching the Accessories

⚠ WARNING: For the sake of safety, the plug must be unplugged from outlet before attaching the accessories.

⚠ WARNING : This appliance should not be used directly on soft plastics, non pre-treated wood or cold glass. To ensure steam can be used on a desired surface,a small test should be conducted in an inconspicuous area to prevent damage.

1. Long Nozzle

Insert the steam nozzle onto the main body (Fig.3/1).

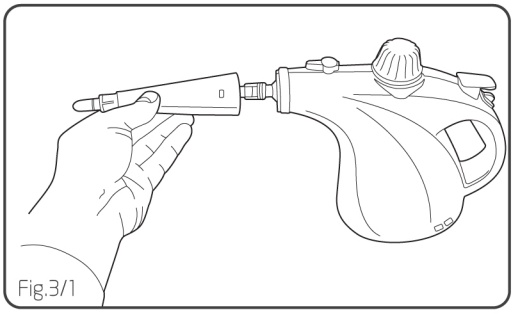

Fig.3/1

When the long nozzle reaches the jet nozzle base twist the long nozzle to the right until it locks safely into place (Fig.3/2).

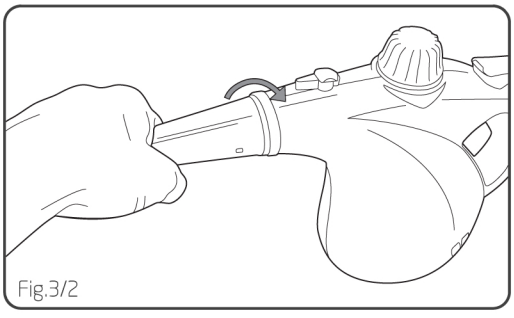

Fig.3/2

2. Detail Nozzle

The detail nozzle can be used to clean corners. Insert the detail nozzle on to the steam nozzle directly (Fig.3/3).

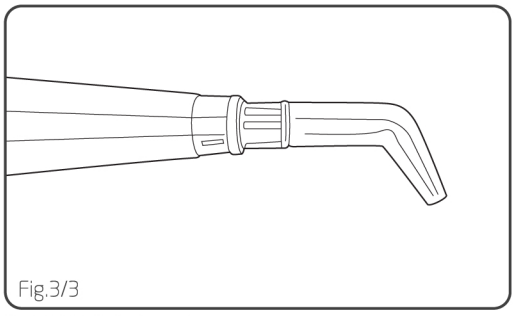

Fig.3/3

3. Stiff Bristle Brush

The nylon brush attachment can be used to clean coarse surfaces. Push the nylon brush nozzle (as with the detail nozzle) as far as it will go to fix into place (Fig.3/4).

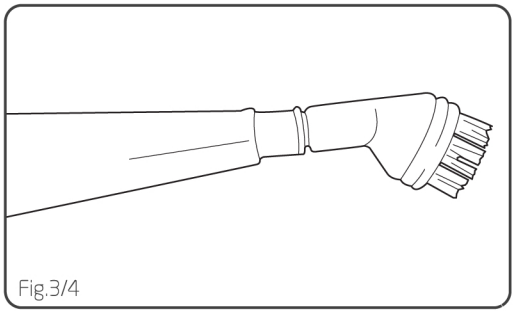

Fig.3/4

4. Upholstery Tool

The upholstery tool can be used in conjunction with the window tool to clean windows and other smooth surfaces (Fig.3/5).

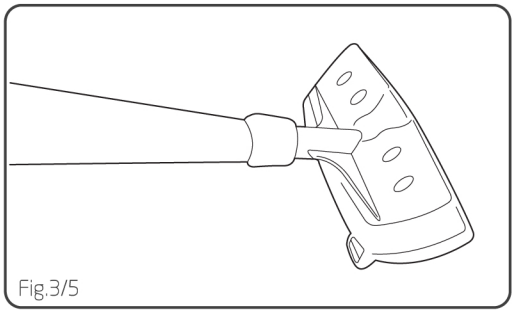

Fig.3/5

It can also be used with the cotton cloth for cleaning upholstery (Fig.3/6).

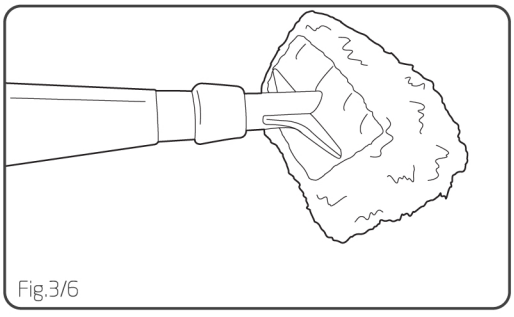

Fig.3/6

The Upholstery Tool is fitted by pushing it onto the nozzle. The cotton cloth is fitted by stretching it over the end of the upholstery tool. The window tool is fitted by clipping it onto the upholstery tool using the two bottom hooks and the large hook at the top to secure it (Fig.3/7).

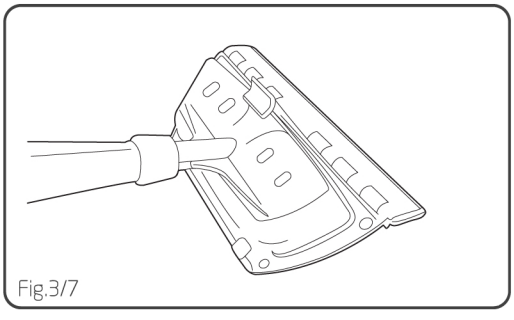

Fig.3/7

4. Preparation for Use

Press down the steam reservoir lid and turn to release (Fig.4/2).

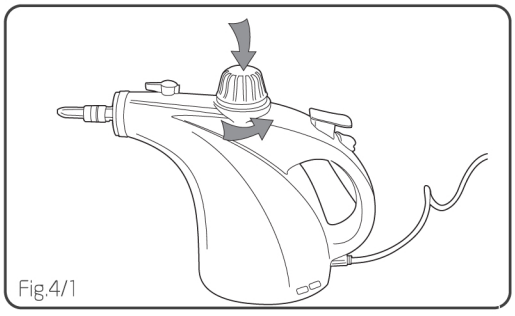

Fig.4/1

Remove the steam rese voir lid by twisting counter-clockwise Fill with water using large jug. Replace lid (Fig.4/2).

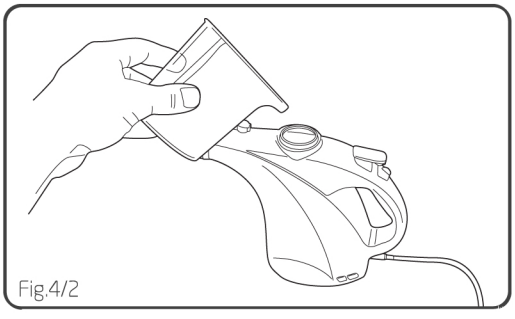

Fig.4/2

Connect the power supply.
Wait for between 30 & 60 seconds for the water to heat and then depress and hold the steam trigger to release the steam (Fig.4/3).

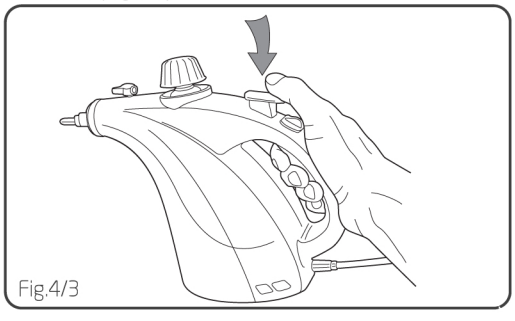

Fig.4/3

The amount of steam generated can be adjusted by the knob at the front of the steamer (Fig.4/4).

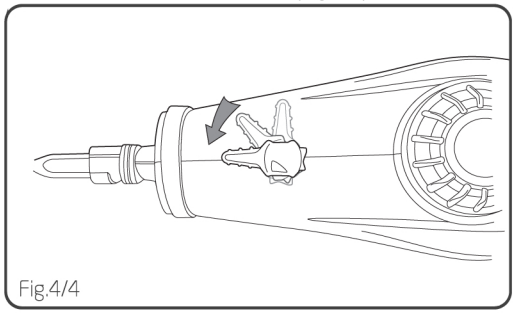

Fig.4/4

When not in use (ie. during warm up or cool down after use) the steam trigger can be locked by sliding the safety latch to the right (Fig.4/5).

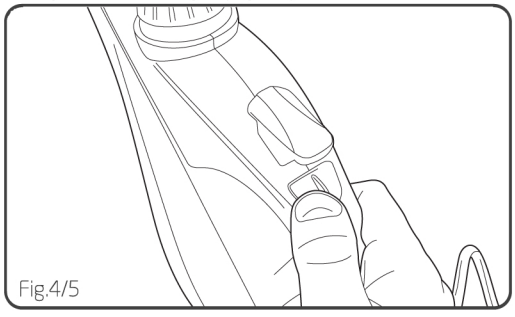

Fig.4/5

Please note the indicators at the base of the unit:

The right LED illuminates when the steamer is on. The left LED illuminates when the steamer is ready to use (Fig.4/6).

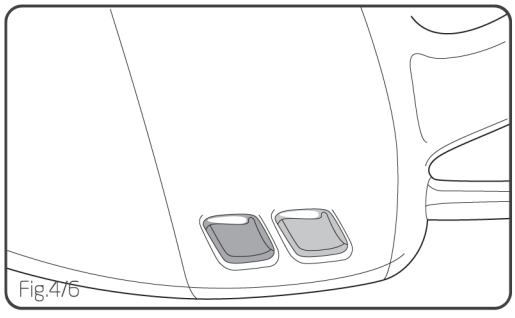

Fig.4/6

6. Technical Specification

Voltage:	120 V ~50Hz
Wattage:	1000 W
Water volume: Steam Tank	2.75 qts
Cord length:	9.75 feet
Weight:	3.96 lbs

5. Troubleshooting

WARNING: To reduce the risk of personal injury, unplug the vacuum cleaner before performing maintenance or troubleshooting checks.

PROBLEM: Appliance does not start.	
Cause:	Not properly plugged into electrical outlet.
Solution:	Plug in firmly.
Cause:	No electricity in electrical outlet.
Solution:	Check fuse or breaker.
Cause:	Internal fuse blown.
Solution:	Have the fuse changed by a qualified electrician.
Cause:	No water in reservoir.
Solution:	Fill water reservoir.
PROBLEM: No steam	
Cause:	No water in reservoir.
Solution:	Fill water reservoir.
PROBLEM: Water runs out from the nozzle.	
Cause:	Too much water in the reservoir.
Solution:	Reduce water in the reservoir.
Cause:	Appliance tilted too far.
Solution:	Hold appliance in an upright position.
Cause:	Appliance not hot enough.
Solution:	Let the appliance heat up for longer before depressing the steam trigger.
PROBLEM: Water 'cooks' during filling.	
Cause:	Water reservoir still hot.
Solution:	Allow to cool before filling.
PROBLEM: Accessory comes loose.	
Cause:	Accessory not correctly attached.
Solution:	Refer to user guide for correct fitting information.
PROBLEM: All solutions exhausted, but steamer is still not working.	
Cause:	Appliance may be damaged.
Solution:	Contact an Authorized Soniclean Dealer

Subject to technical change without notice.

CE